





This luminaire contains MSÜ 3S



- 1 SV-input 230/216V AC/DC* (supply by the safety light unit)
- 2 Output to the safety light 230/216V AC/DC *
- 3 Addressing according to the label (see examples)
- 4 SE: Switching input (not used)
- 5 Status LED (not visible on the outside of the luminaire)
- * Attention, interchange of the input/output will lead to non-functioning module.

Examples of addressing (Zehner = Tens / Einer = Units / Adresse = Adress)

Zehner				
+10	ON	0		
DS	12	BS		



Zehner	+	Einer	= Adres
0	+	1	= 1
+10	+	0	= 10
+10	+	3	= 13
0	+	0	= 20

Signal states of the LED:

- LED on = light ON and current flow GREATER than calibration value => light on and OK
- LED _______ = light ON and current flow SMALLER than calibration value => light on but bulb defective or not calibrated
- LED _____ = calibration of the light active
- LED JMMMML = test mode active
- LED off = light switched off

The module is provided with an automatic load detection which must be calibrated once by the master at first installation or when replacing.

For calibration refer to the master menu chapter 5.5.3 or quattro menu chapter 7.7.

DIP switch functions:


DIP switch 1: OFF for non maintained luminaire (BS)

DIP switch 1: ON for maintained luminaire (DS)

DIP switch 2: OFF for luminaire adresses 1-9 DIP switch 2: ON for luminaire adresses 10-19

Attention!

The luminaire adresses must be set correctly. Double adressing must be avoided. Other than that the luminaire(s) have to be opened up or even dismantled again in certain circumstances. The electronic monitoring module MSÜ 3-Dali is only suitable for operation with a corresponding safety lighting system.

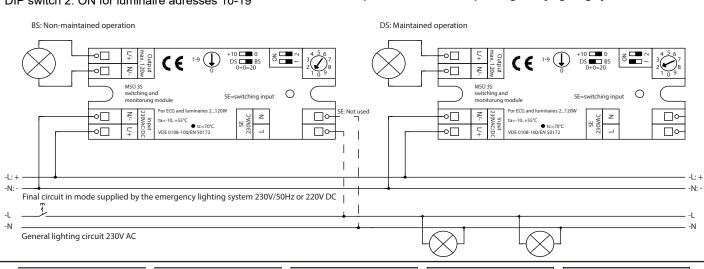

De gegevens in deze publicatie zijn zonder verbintenis en kunnen wijzigen ingevolge technische evolutie. Les données dans cette publication sont sans engagement et peuvent subir des modifications en fonction de l'évolution technique. Die in dieser Publikation verwendeten Daten sind unverbindlich und können sich infolge technischer Entwicklung verändern. Information is provided without obligation, and may be modified as a result of technical developments.

Esta información no es caracter contractual y puede modificarse como resultado del desarrollo técnico.

ETAP Lighting International NV | Antwerpsesteenweg 130 - 2390 Malle - Belgium